


SENTRY WIRELESS KEYPAD

CE 0681

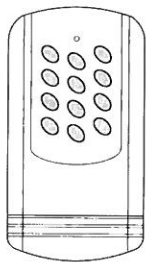

Made in Italy

#050520

1 - Introduction

The Sentry Wireless Keypad (#050520) is a codified radio keypad operating at 433,92 MHz. The best use of the product is on applications where a codified radio signal has to be used to control: gates, garage doors, rolling shutters, sun-blinds, anti-burglar appliances, lightings, etc. The code has a very high security coding system (19683 code combinations). The radio transmission is enabled only after the dialing of a security user code. There are up to 4+2 different channels that can activate up to 6 different receivers or relays. The internal memory can store up to 24 different security user codes and 1 Master code.

The product fully complies with the European directives 89/336/CEE, 99/05/CE and Part. 15 of FCC Rules..

2 - Technical specifications

Number of keys:	12
Number of channels:.....	4 + 2
Supply:	3 Vdc
Battery duration:	about 36 months
Battery type:	Litium CR123A
Current consumption:.....	20 mA
Operating frequency:	433.92 MHz
Modulation:	AM/ASK
E.r.p.:.....	6 mW
Security Code combinations number:	19683
User security code number:.....	24+1
Transmission duration:	until press / 1 sec.
Range in open space:	from 150 to 700 m
Operating temperature:	from 14 °F to 131 °F
Dimensions:	5.7x3.07x1.25 in
Weight:.....	3.24 oz
IP Protection Grade:	IP44
Buzzer / Tamper (where installed)	

3 - Types

- 433KPD : Dip-switch Radio keyboard without tamper;
- 433KPDT : Dip-switch Radio keyboard with tamper;

4 - Battery replacement

Remove the cover and extract the old battery from the bottom site of the electronic card with an upward traction. Insert the new battery on the battery location, respecting the right polarity.

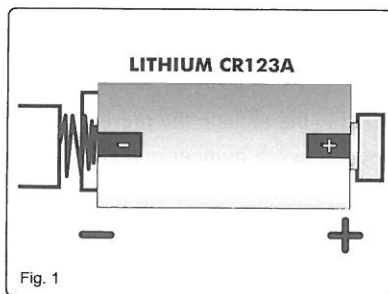


Fig. 1

NOTES: The appliance uses a lithium battery type CR123A-S-3V. The removal and the disposal of the battery must have effected before the elimination of the appliance and according to the current Regulations. ATTENTION: - Danger of explosion if the battery is not replaced in the correct way! Replace only with an equal or equivalent type.

433KPD

FCC ID : PWJDK433

This device complies with FCC Rules Part 15 Operation is subject to the following two conditions:
1) This device may not cause harmful interferences;
2) this device must accept interference that may cause undesired operation.

5 - Installation steps

- 1) Locate the best position for the installation, avoid metallic surfaces that could decrease the RF emission.
- 2) Mark the location of the mounting holes using the base as a drilling template.
- 3) Drill the mounting holes and insert the plugs.
- 4) Remove the protection strip from the seal.
- 5) Assemble the base and seal together.
- 6) Install the base with the screws supplied.
- 7) Install the keypad to the base.
- 8) Secure in place with the 2 screws supplied.

6 - Programming wireless keypad

Terms to understand

Master Password: The 5-digit code used to access programming features. Factory default is "11111." This needs to be changed by the end user for security reasons.

Access Code: The 1 to 5-digit code used to open the gate (24 unique codes are possible). If access code is less than 5 digits it requires the # sign after code is entered. Example: "2 #." If the code is 5 digits the # sign is not required.

Relay 1: The receiver has 2 relays. P1 (relay 1) is factory wired to the receiver input on the control board.

Relay 2: The receiver has 2 relays. P2 (relay 2) is factory wired to "Open / Free Exit" input on the control board.

Security Code (Dip Switch Code): The keypad does not have dipswitches. Instead, the receiver has a learn mode which can be used to program the keypad to the receiver. The keypad can also be manually programmed if a transmitter is being used. See "Changing Security Code" on paragraph 11.

PUK Code: "Password Unblocking Key." The PUK code is located inside the keypad and is needed when the master password has been lost. Copy and store in a safe place for future reference. Must be 5 digits long lead with zeros.

" * " Key: located on the keypad is used to cancel last command entered.

Red Light Blinks: When blinking, the keypad is sending a signal to the receiver.

Valid access code was entered.

7 - Password

The keypad has a Master Password factory-set to "11111".

If the Master Password remains the default one, the following functions are allowed:

- Insertion of new User Codes;
- Cancellation of stored User Codes;
- Replacement of the Master key itself.

The Master Password and the User code can have up to 5 digits. If the chosen code is shorter than 5 digits, press the key "#" after the last digit, to complete the number, as indicated below:

- Example 1 : User code 123 : Enter: 1,2,3,#.
- Example 2 : User code 1234 : Enter:1,2,3,4,#.

Note: Do not install keypad until "Learning Access Codes in Receiver" has been completed.

8 - Programming New Master Password:

- 1) Enter the Master Password "11111."
- 2) Enter "8." If correct, 2 short beeps (if 1 long beep is heard, start over with step 1.)
- 3) Enter the Master Password (up to 5 digits), if less than 5 digits, "#" is required.
- 4) Enter "8."
- 5) Enter the Master Password again to verify.
- 6) Press "8." If correct, 2 short beeps the New Master Password is set. (If 1 long beep is heard, start over with step 1.)